



# Sony Cyber-shot DSC-W690 LCD screen Replacement

This guide will show you how to disassemble and instal new LCD screen.

Written By: Will Norris






## TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Battery

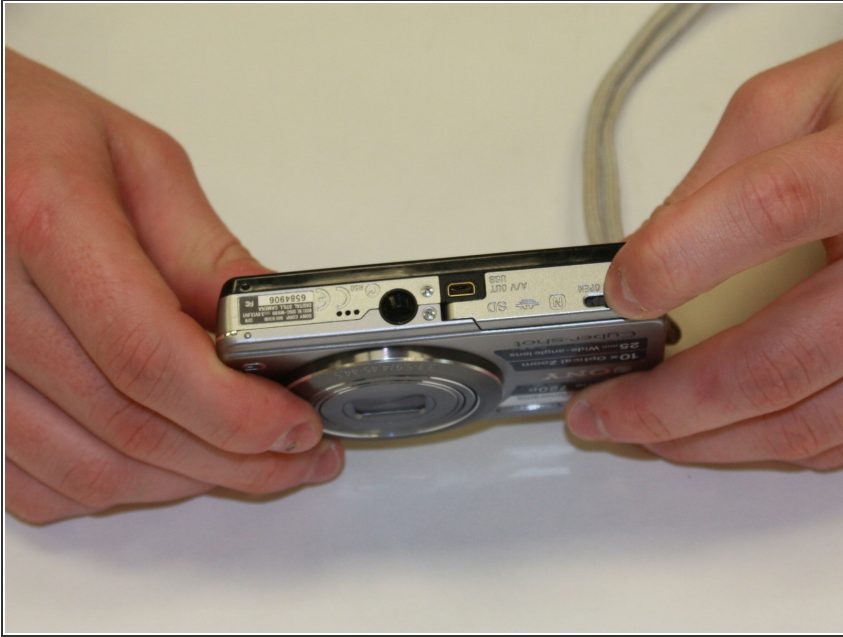

- Open the battery door.



## Step 2

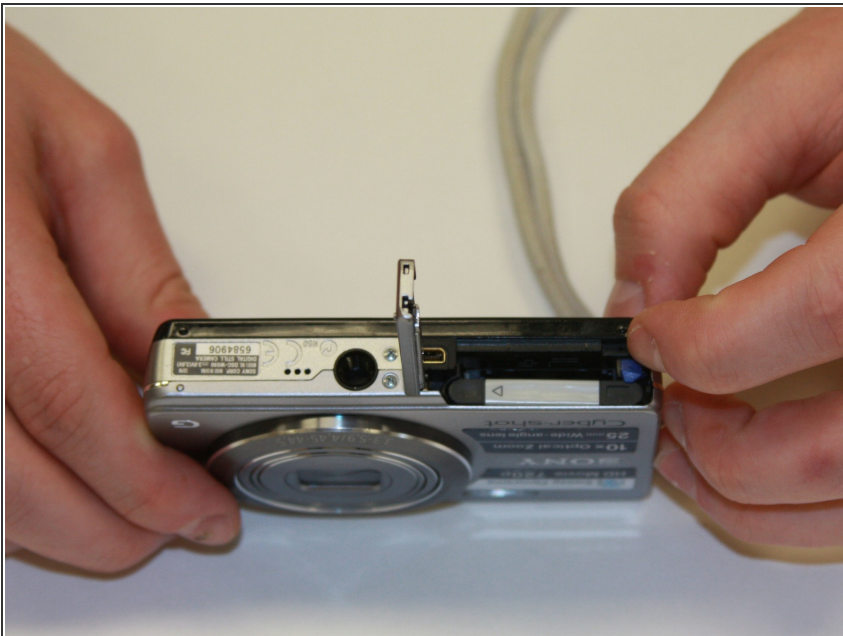

- Open the battery lock to release the battery.




## Step 3

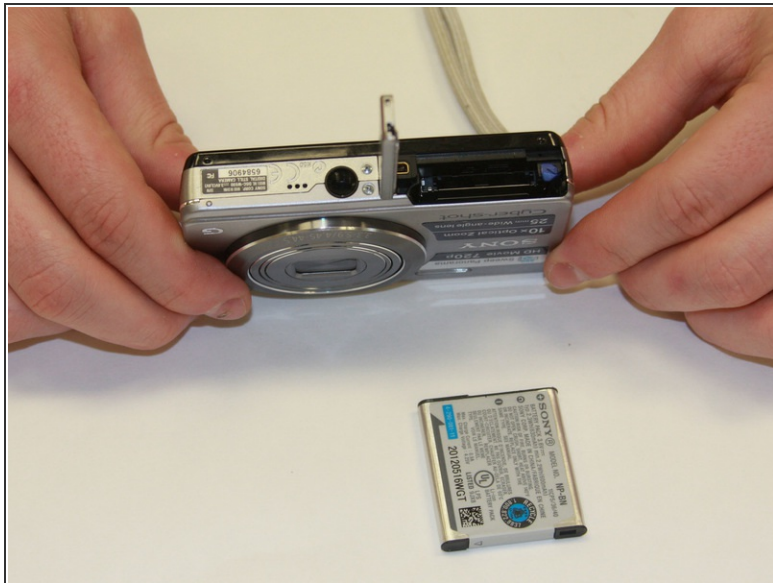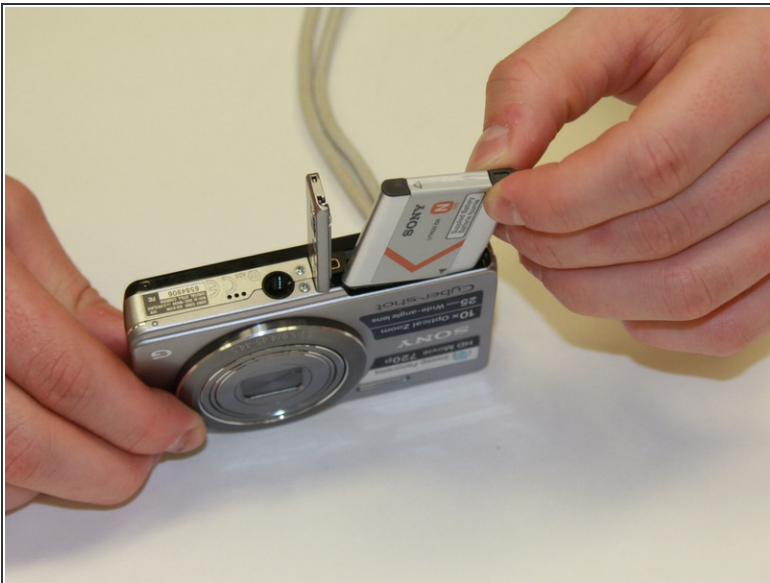


- Remove the battery.

## Step 4 — Front and Back Case

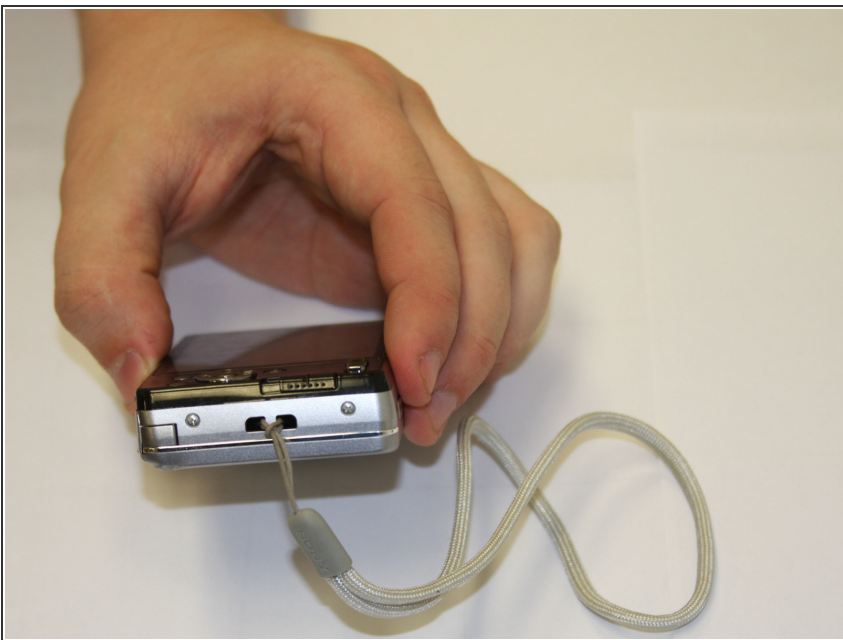



- Remove the wrist strap

## Step 5

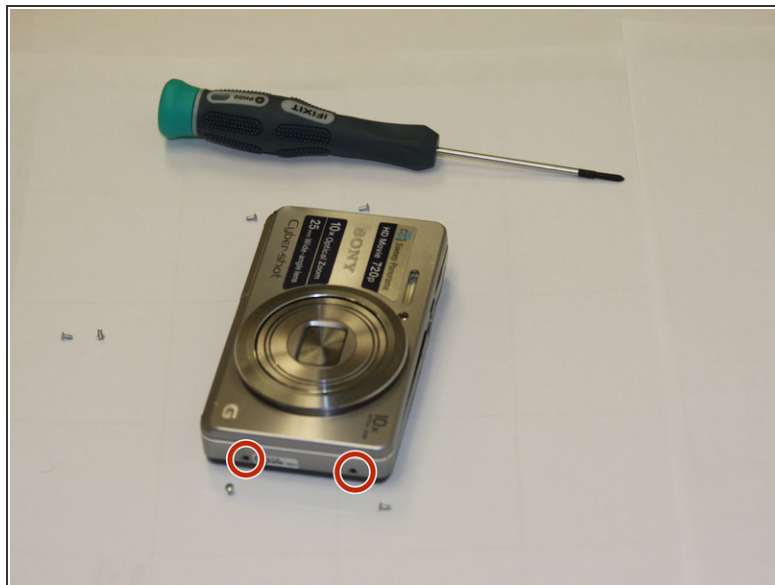

- Remove all 6 3mm outside screws


## Step 6

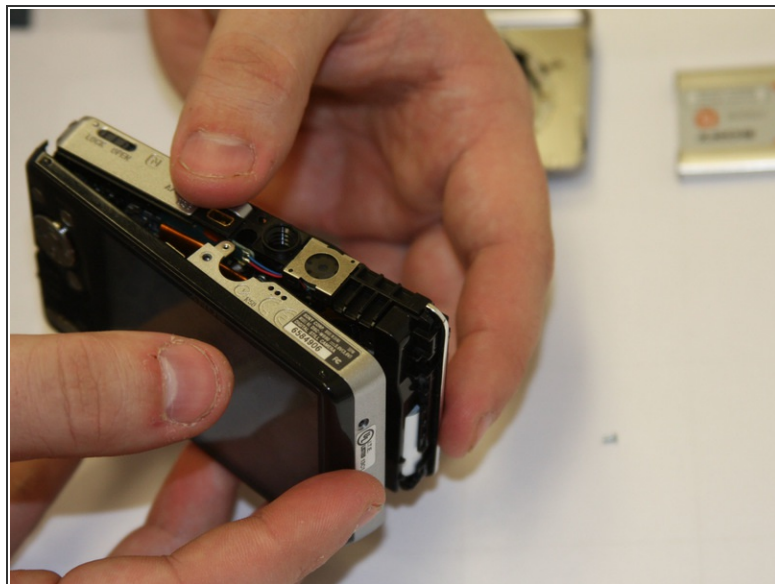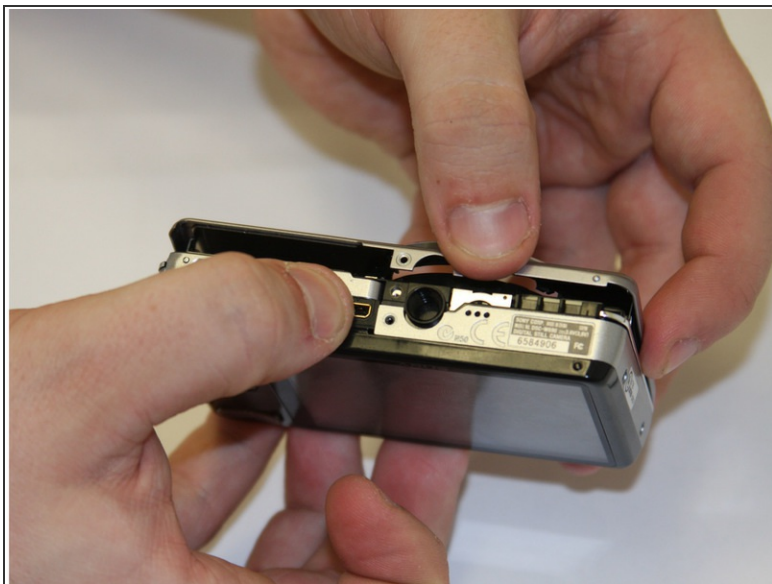

- Carefully pry the case apart.




## Step 7 — LCD screen

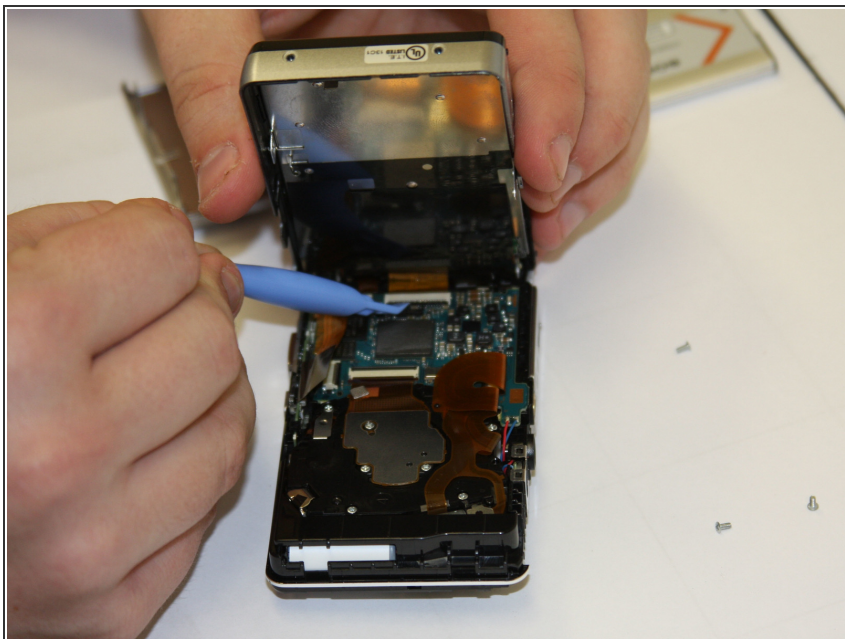


- Use spudger to delicately open wire contact.

## Step 8

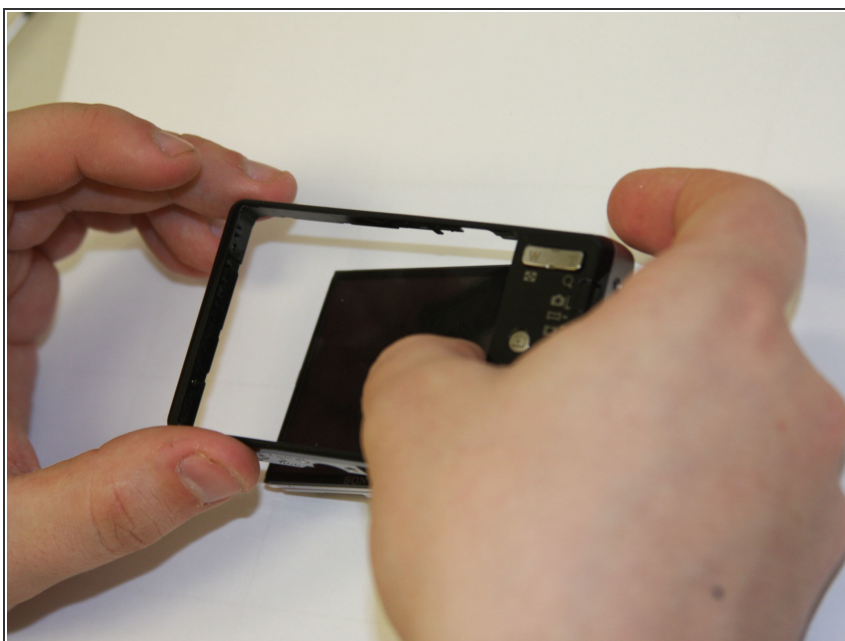



- Gently push the LCD screen out of back case.

## Step 9

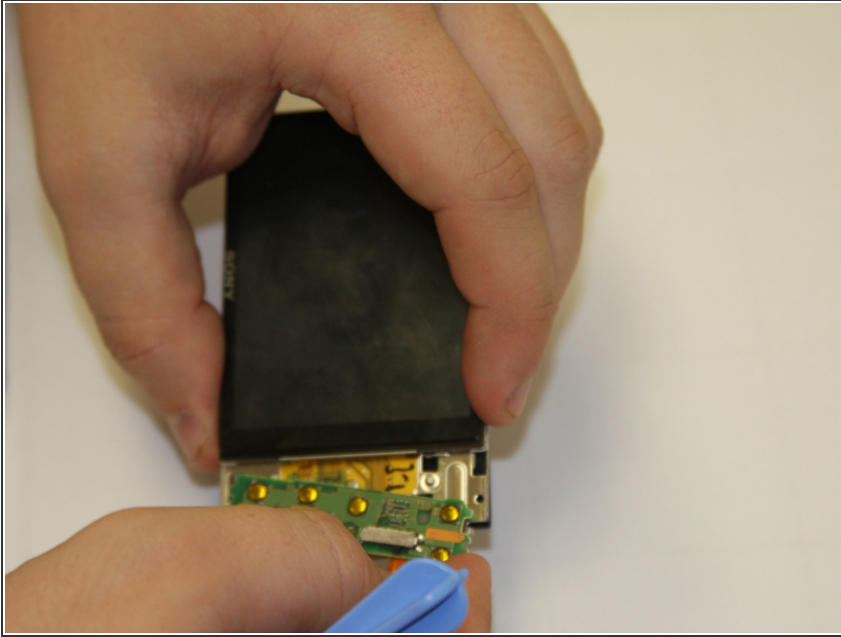

- Remove the button circuit board.

## Step 10

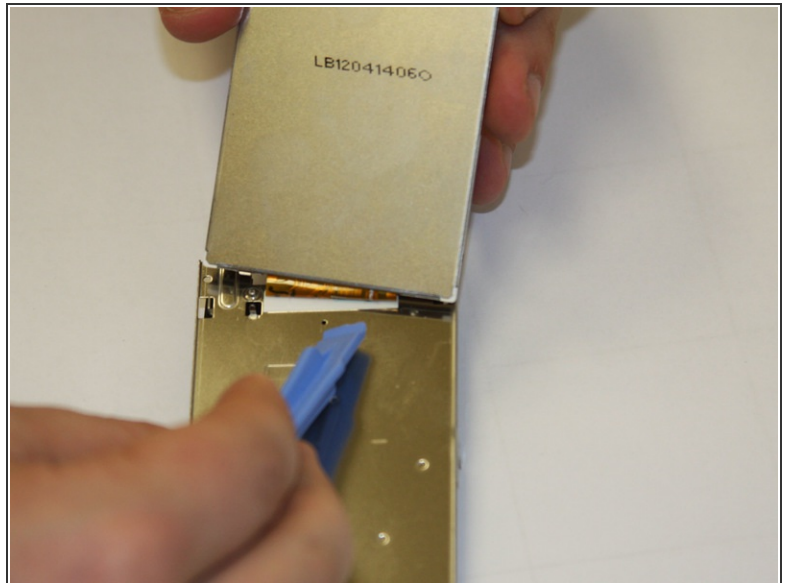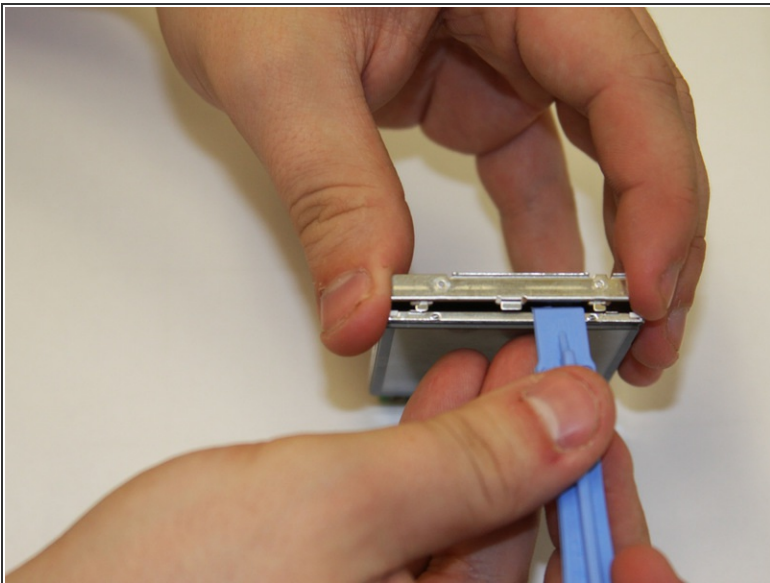

- Use spudger to pry apart the LCD screen from the support bracket.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 08:56:27 PM.

